

6-3. Initialization

Items to initialize

After reconnecting or performing maintenance on the battery, the following items must be initialized for normal system operation.

Item	When to initialize	Reference
Power window	<ul style="list-style-type: none">• After reconnecting or changing the battery• After changing a fuse	P. 41
Engine oil maintenance data	After changing engine oil	P. 264
Tire inflation pressure warning system	<ul style="list-style-type: none">• When the standard tire pressure changes by replacing tires or wheels• When tires are rotated• When tire pressure sensors are replaced• When driving with the tires inflated to a higher than standard tire pressure	P. 276

